

SWITCH WIRING INSTRUCTION FOR CLIPSAL WS226PB SERIES PUSH BUTTON STATIONS

F254

MOMENTARILY OFF



MOMENTARILY ON

