

HANECO LED FLOODLIGHT INSTALLATION GUIDE

STAX^{G4}

Thanks for choosing our STAX^{G4} LED Floodlight products.
We strongly recommend that you read this manual carefully before installation.


WARNING

The luminaire must be installed by professional electrician. Switch power off when wiring the luminaire. Ensure input voltage conforms to the voltage range of product. Ensure wires are securely connected. Before switching on, ensure that all the wiring is correct. The warranty is void if product is not installed according to the instructions.
The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

| MODEL | POWER | Color temperature | Efficacy (lm/w) | CRI | SDCM | Ambient temperature | Dimension (mm) |
|------------|---------|-------------------|-----------------|-----|------|---------------------|----------------|
| STAX30WG4 | 15/30W | 3/4/5000K | 120lm/w @4000k | >80 | <5 | -20 to 45°C | 155*124*30 |
| STAX50WG4 | 30/50W | 3/4/5000K | 120lm/w @4000k | >80 | <5 | -20 to 45°C | 210*168*30 |
| STAX100WG4 | 75/100W | 3/4/5000K | 120lm/w @4000k | >80 | <5 | -20 to 45°C | 275*220*35 |

| MODEL | Weight (kg) | Max. Mounting height (m) | Max. Projected area (m ²) |
|------------|-------------|--------------------------|---------------------------------------|
| STAX30WG4 | 0.71 | 5 | 0.024 |
| STAX50WG4 | 1.15 | 5 | 0.040 |
| STAX100WG4 | 1.85 | 5 | 0.066 |

VOLTAGE/FREQUENCY 220-240Vac,50/60Hz


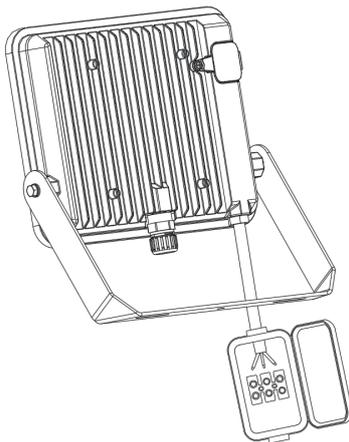


IP66 Junction Box


*No supplied with product

The terminal block should be complying with AS/NZS60998-2-1/IEC60998

Installation Instructions

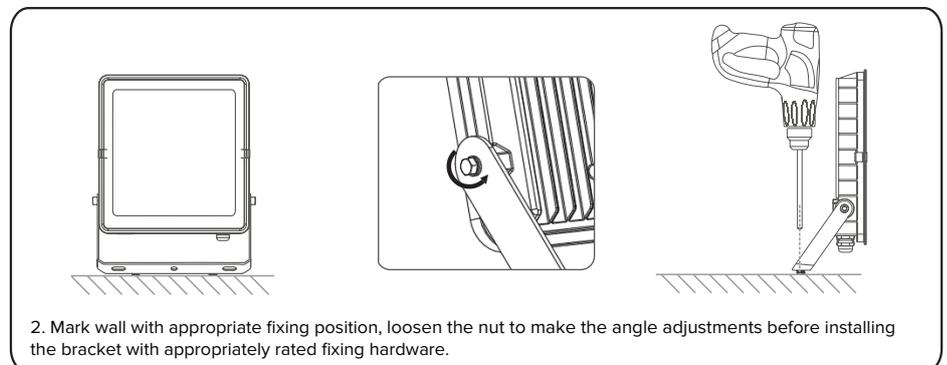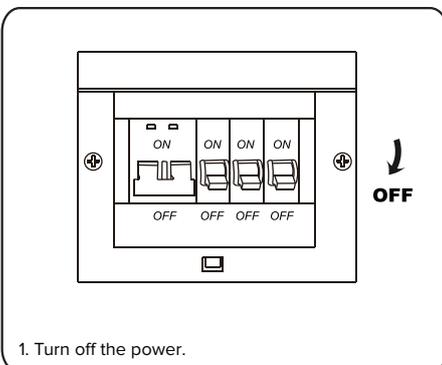


STAX^{G4}

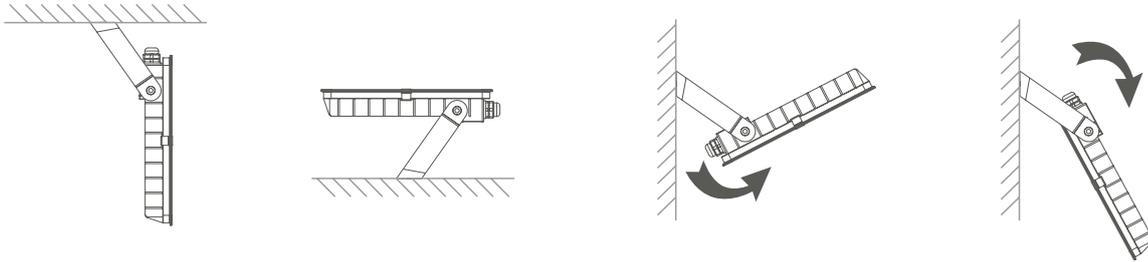


3. Adjust luminaire to the desired angle then tighten the nut to secure the angle.

Brown: L
Blue: N
Yellow & Green: ⊕

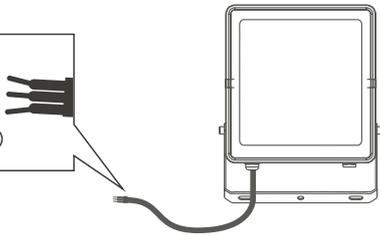


4. Connect luminaire to 240V main supply as per diagram.

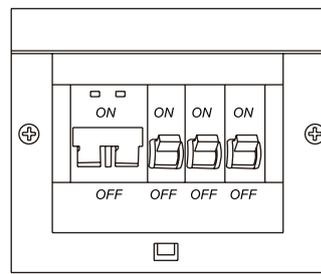

5. Turn on the power.

⚠ IMPORTANT

POWER selections MUST NOT be changed whilst the product is energised

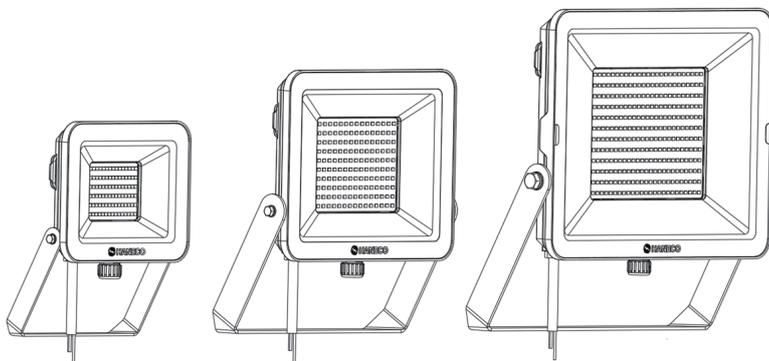

| CCT | Power | |
|---------|-------|-------|
| | 3000K | 15W |
| * 4000K | 30W | * 50W |
| 5000K | 75W | *100W |

*Default Settings

